

How to set your combination:


1. **STOP** The shackle must be completely CLOSED at all times while you are setting your combination.
 2. Align the dials to B-O-L-T along the indicator line. (Fig. 1) ****If you have already changed the combination on your lock, use your current combination instead of BOLT to open the lock.****
 3. Turn the lock over so the back is facing you.
The letters will be upside down. (Fig.2) Using a coin, turn the slot on the right clockwise to RESET. (Fig. 2)
 4. With the front of the lock facing you, rotate the dials to your desired word combination along the indicator line. (Fig. 3)
 5. Return the slot on the back of the lock to its original position. (Fig. 4)
 6. Open and close the shackle once to confirm that you have successfully set your combination.
- To Lock:** SCRAMBLE dials. (Fig. 5) Your new combination is now set. Remember to write down your new combination and put in a safe place.

Cómo fijar la combinación:

1. **PARE** La argolla debe estar completamente CERRADA en todo momento mientras esté configurando la combinación.
 2. Alinear los botones hasta B-O-L-T usando la línea del indicador. (ver fig. 1)
 3. Dar vuelta al candado de manera que vea la parte de atrás. Las letras deben estar al revés. (fig.2) Con una moneda, gire la ranura a la derecha en sentido horario hasta llegar a RESET. (ver fig. 2)
 4. Con el candado de frente, gire los botones hasta que la combinación de palabra deseada quede alineada con la línea del indicador. (ver fig. 3)
 5. Vuelva a girar la ranura en la parte de atrás del candado a la posición original. (ver fig. 4)
 6. Abra y cierre el grillete una vez para confirmar haber programado con éxito la combinación.
- Para cerrar:** MEZCLE los botones. (ver fig. 5) La nueva combinación está programada. Recuerde anotar la combinación y guardarla en lugar seguro.

Comment régler votre combinaison :

1. **ARRÊT** Le cadenas doit rester totalement FERMÉ pendant que vous établissez votre combinaison.
2. Alignez les cadrans à la ligne indicatrice à B-O-L-T. (ill. 1)
3. Retournez le verrou afin que l'endos vous fasse face. Les lettres seront inverses. (ill. 2) En utilisant une pièce de monnaie, tournez la fente dans le sens des aiguilles d'une montre jusqu'à RESET. (ill. 2)
4. Lorsque l'avant du verrou vous fait face, tournez les cadrans jusqu'à la combinaison de mots désirée, à la ligne indicatrice. (ill. 3)
5. Retournez la fente à l'arrière du verrou à sa position originale. (ill. 4)
6. Ouvrir et fermer la serrure une fois pour confirmer que vous avez réussi à régler votre combinaison. **Pour verrouiller :** MÉLANGEZ les cadrans. (ill. 5) Votre nouvelle combinaison est maintenant enregistrée. Veuillez noter votre nouvelle combinaison et gardez-la dans un endroit sécurisé.

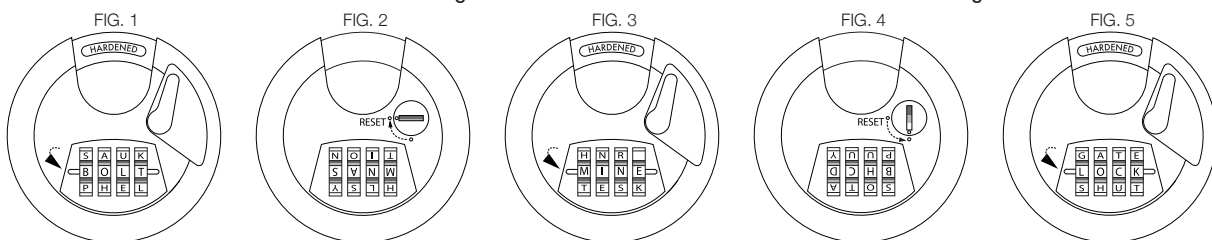

SAMPLE WORDS • PALABRAS DE MUESTRA • D'EXEMPLES DE MOTS

B	D	G	H	L	M	P	R	S	T
BALL	DARE	GALE	HALL	LAST	MAN	PALE	RAN	SAND	TALE
BAT	DEAL	GAS	HEAD	LATE	MANE	PARK	RATE	SANE	TAN
BEAN	DECK	GILL	HEAL	LEAD	MANY	PASS	READ	SEAL	TEAL
BEAT	DEED	GLAD	HEAT	LEAN	MEAT	PELT	REAL	SEAT	TELL
BITE	DIET	GLUE	HILL	LESS	MESS	PILL	REST	SEND	TEST
BOAT	DOCK	GOAD	HISS	LILY	MINE	PINE	ROCK	SHUT	TINT
BONE	DOLE	GOAL	HIT	LIT	MITT	POLE	ROLL	SIT	TINY
BURN	DONE	GOAT	HOLE	LONE	MORE	PULL	ROOT	SLAY	TOLL
BUSY	DULL	GONE	HOOD	LORE	MOST	PUNT	RULE	SLED	TOTE
BYTE	DYE	GOOD	HOSE	LUTE	MULL	PUT	RUST	SOCK	TURN